






MC - 68011 DACIA LOGAN II, SANDERO II / RENAULT CAPTUR

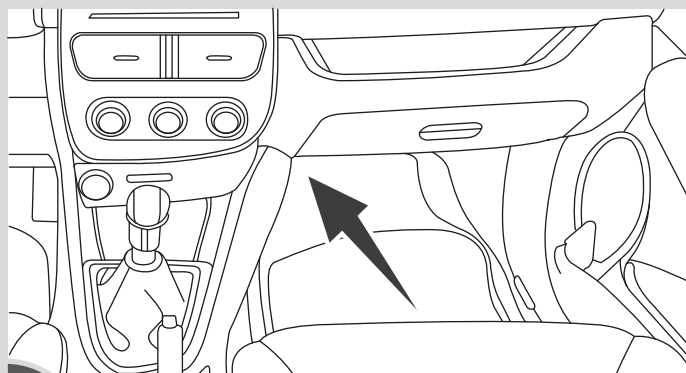


1 LOCALIZAR EL FILTRO DEBAJO DE LA GUANTERA.
LOCATE THE FILTER ON THE BOTTOM OF THE GLOVE BOXES.

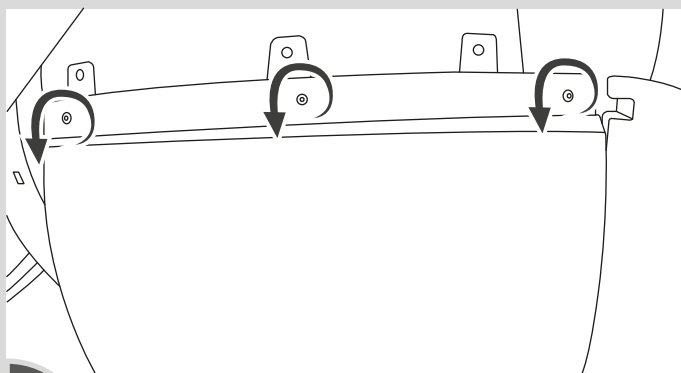


2 DESATORNILLAR LOS TORNILLOS DE LA PARTE INFERIOR DE LA GUANTERA.
UNSCREW THE SCREWS FROM THE BOTTOM OF THE GLOVE BOX.

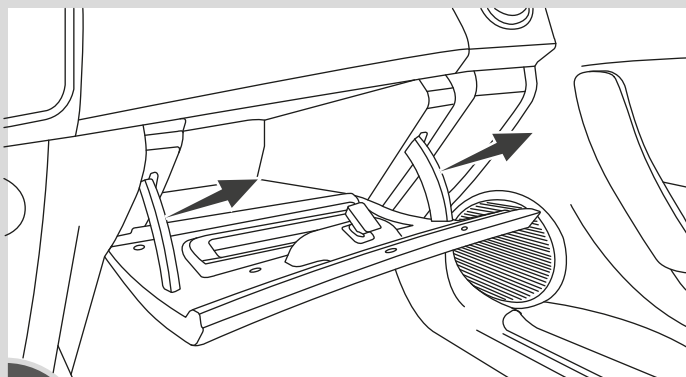


3 RETIRAR LA GUANTERA.
REMOVE THE GLOVE BOX.

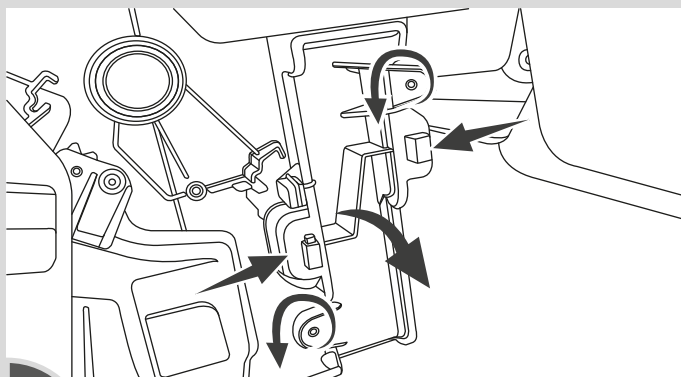

4 ABRIR LA TAPA DEL FILTRO QUITANDO LOS TORNILLOS Y PRESIONANDO LAS PESTAÑAS.
OPEN THE FILTER COVER BY REMOVING THE SCREWS AND PRESSING THE TABS.

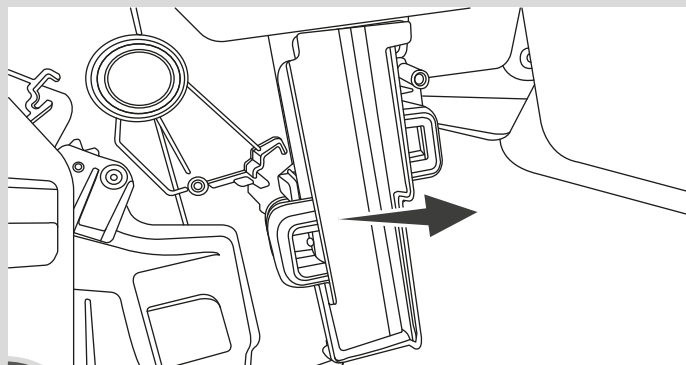

5 RETIRAR EL FILTRO USADO.
REMOVE THE USED FILTER.

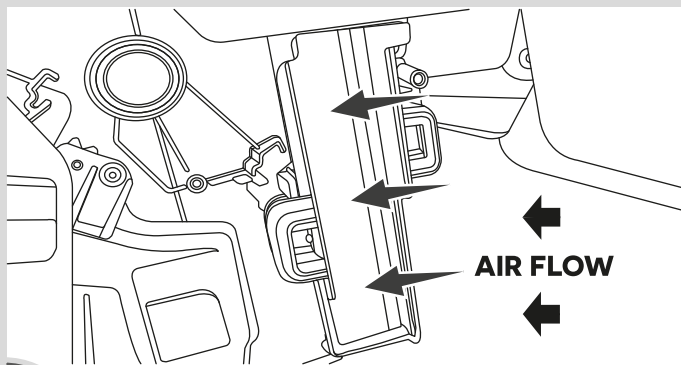

6 INTRODUCIR EL FILTRO NUEVO Y SEGUIR LOS PASOS INVERSOS.
INTRODUCE THE NEW FILTER AND FOLLOW THE INVERSE STEPS.